

MIR[®]OIL

- EZ FLOW[®] Filter Series
- Polishing Filter Series

MirOil Filter Bags

MADE IN USA with “Snap on” fitments

Filter as many as 1000 fryers with a single filter bag

DIRECTIONS FOR USE AND SAFETY INFORMATION

Safer and Faster Filtering With The EZ FLOW[®] Filter

Always use a pot that will fit under the valve and is big enough to hold all the oil.

When full, the oil level should be at least 2” below the top of the pot.

Filter in the morning when the oil is liquid and only 10F or 20F above room temperature.

For Faster Filtering With Heavy Crumb Loads

1. Drain the oil directly into filter pot without passing through the filter.
2. Use a sauce pan and oil from the filter pot to flush crumb residue from the bottom of the fryer.
3. Shut the fryer drain valve. The heavy crumb and sludge will settle to the bottom of the filter pot. Place the EZ FLOW[®] filter across the top of the fryer.
4. Use the sauce pan to return the oil to the fryer through the filter bag until the weight of the oil and pot is light enough to be lifted and poured safely.
5. Set thermostat to frying temperature and turn fryer ON.

Cleaning procedure

Your MirOil Filter Bag cleans in seconds with hot water spray.

Do NOT use soap or detergent to clean the filter, fry baskets, fryers or filter pots. Do NOT clean any of these items in the dishwasher. The least residue of soap or detergent will recue the life and performance of your oil.

Statement of Limited Filter Warranty

MirOil Warrants that the filter is free of defects and is suitable for filtering fryer oil at temperatures of up to 350 F (180C)

This warranty shall be void if the filter has been misused or improperly handled.

MirOil and its appointed agency shall be the sole judge of warranty applicability.

Warranty liability shall be limited to repair or replacement of the filter at the option of the manufacturer.

Expressly excluded are implied warranties of merchantability. There are no warranties which extend beyond those recited in this document.

Filters which are thought to be defective should be returned to the manufacturer at the address listed below.

13114 Bleinheim Lne, STE B, Matthews, 28105, NC, USA

+1 980 890 7010

www.MirOil.com

Orders@MirOil.com

MIR[®]OIL

Products for Better Frying




LLT980-002-FILTERS

Visit our website to view our full product range

www.MirOil.com

Hand Pump Oil Filter Machines

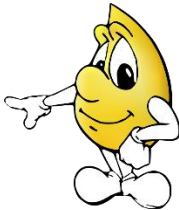

Electric Pump Oil Filter Machines



FryPowder – Portion packs and Bulk Powder



Frypolder[®]
Antioxidant Adsorbent
& Filter Aid

MIR[®]

Utility pails and
filter pots

